



# Sony Action Cam Mini HDR-AZ1 Protective Doors Replacement

This guide will show how to replace the doors that protect the charging port and SD card slot.

Written By: Mathieu LaFond



## INTRODUCTION


Are the protective doors broken or faulty? This is a simple guide that will help you replace them.

## Step 1 — Protective Doors



- Pull on the port door until it opens.

## Step 2

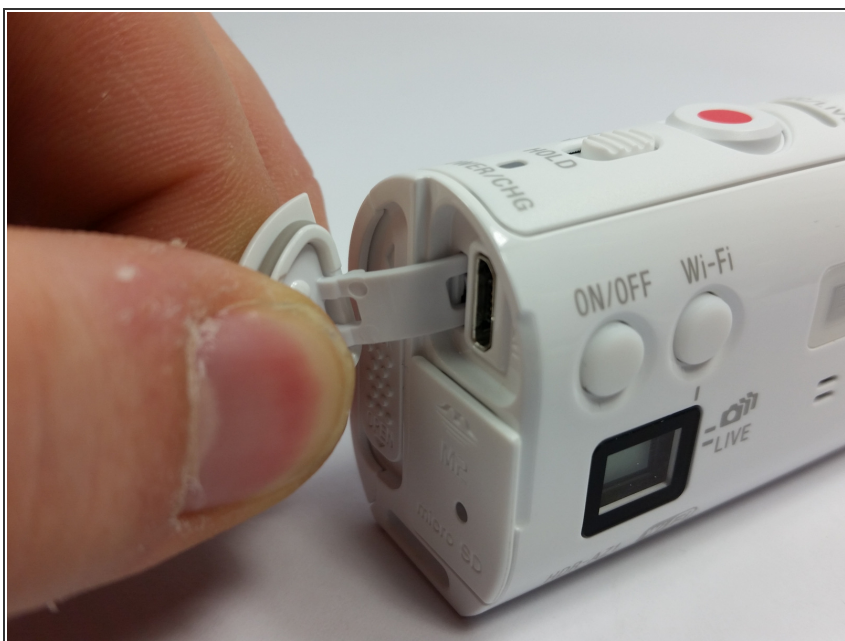

- Grasp the door and pull straight out. Don't worry, this will not break it.

## Step 3



- The door should pop out.

To remove the SD card dust door, follow these exact steps. To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 06:55:18 AM.